

 
# Operation Manual

## DIB-6000 Direct Box



**interM**

# Warning

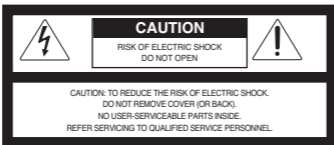

## WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.



This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operation and maintenance (servicing) instructions in the literature accompanying the appliance.

Caution: These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

Attentions: Pour prévenir les chocs électriques ne pas utiliser cette fiche polarisée avec un prolongateur, une prise de courant ou une autre sortie de courant, sauf si les lames peuvent être insérées à fond sans en laisser aucune partie à découvert.

\*WARNING FOR YOUR PROTECTION PLEASE READ THE FOLLOWING-WATER AND MOISTURE: Unit should not be used near water (e.g. near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, etc). Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.

\*Do not install this equipment in a confined space such as a book case or similar unit.

\*This apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

\*This apparatus shall be connected to a mains socket outlet with a protective earthing connection.

\*It has to be easy to disconnect the device. To disconnect the device from power, separate AC input cable from inlet or unplug the AC Cord.

\*CAUTION : These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

NOTE : This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

# Contents

<b>Welcome</b> .....	2
<b>Unpacking</b> .....	2
<b>Installation</b> .....	3
<b>Important Safety Instructions</b> .....	3
<b>Features</b> .....	7
<b>Equipment Setup and Inspection</b> .....	8
<b>Front Panel</b> .....	9
<b>Rear Panel</b> .....	11
<b>Applications</b> .....	13
<b>Block Diagram</b> .....	14
<b>Specifications</b> .....	15
<b>Service</b> .....	17
<b>Warranty</b> .....	17

“We, Inter-M to apply the appropriate set of E4 & Class A for Electromagnetic Environment Condition”

# Welcome

**A personal welcome to you from the management and employees of Inter-M**

All of the co-workers here at Inter-M are dedicated to providing excellent products with inherently good value, and we are delighted you have purchased one of our products.

We sincerely trust this product will provide years of satisfactory service, but if anything is not to your complete satisfaction, we will endeavor to make things right.

Welcome to Inter-M, and thank you for becoming part of our worldwide extended family!

# Unpacking

Please take a few minutes to read this manual to familiarize yourself with important information regarding installation, product features, and operation.

As with most electronic devices, **ORIGINAL PACKAGING (OR EQUAL) IS REQUIRED** in the unlikely event that the product needs to be returned for servicing.

# Installation

## Environment

Never place this product in an environment which could alter its performance or reduce its service life. Such environments usually include high levels of heat, dust, moisture, and vibration.

# Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.

12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

**- AVOID EXCESSIVE HEAT, HUMIDITY, DUST AND VIBRATION**

Keep the unit away from locations where it is likely to be exposed to high temperatures or humidity-such as near radiators, stoves, etc. Also avoid locations which are subject to excessive dust accumulation, or to vibration that could cause mechanical damage.

**- AVOID PHYSICAL SHOCKS**

Strong physical shocks to the unit may cause damage. Handle the unit with care.

**- DO NOT OPEN THE CASE OR ATTEMPT REPAIRS OR MODIFICATIONS YOURSELF**

This product contains no user-serviceable parts. Refer all maintenance to qualified Inter-M service personnel. Opening the case and/or tampering with internal circuitry voids the warranty.

- ALWAYS POWER OFF BEFORE MAKING CONNECTIONS

Always turn the AC mains OFF before connecting or disconnecting cables. This is important to prevent damage to the unit itself as well as other connected equipment.

- HANDLE CABLES CAREFULLY

Always plug and unplug cables (including the AC mains power cord) by gripping the connector, not the cord.

- CLEAN WITH A SOFT DRY CLOTH

Never use solvents such as benzine or paint thinner to clean the unit. Wipe clean with a soft, dry cloth.

the cart/apparatus combination to avoid injury from tip-over.

13. Unplug this apparatus during lightning storms or when unused for long periods of time.

14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

- AVOID EXCESSIVE HEAT, HUMIDITY, DUST AND VIBRATION

Keep the unit away from locations where it is likely to be exposed to high temperatures or humidity-such as near radiators, stoves, etc. Also avoid locations which are subject to excessive dust accumulation, or to vibration that could cause mechanical damage.

- AVOID PHYSICAL SHOCKS

Strong physical shocks to the unit may cause damage. Handle the unit with care.

- DO NOT OPEN THE CASE OR ATTEMPT REPAIRS OR MODIFICATIONS YOURSELF

This product contains no user-serviceable parts. Refer all maintenance to qualified Inter-M service personnel. Opening the case and/or tampering with internal circuitry voids the warranty.

- ALWAYS POWER OFF BEFORE MAKING CONNECTIONS

Always turn the AC mains OFF before connecting or disconnecting cables. This is important to prevent damage to the unit itself as well as other connected equipment.

- HANDLE CABLES CAREFULLY

Always plug and unplug cables (including the AC mains power cord) by gripping the connector, not the cord.

- CLEAN WITH A SOFT DRY CLOTH

Never use solvents such as benzine or paint thinner to clean the unit. Wipe clean with a soft, dry cloth.

 


# Features


- ❑ Converts unbalance signals to balance signals and balance signals to unbalance signals.
- ❑ Built-in USB TO UART converter so that system can be controlled through PC USB terminal. (RS-485)
- ❑ Powered by USB in PC.
- ❑ General dynamic MIC (ex. RM-01) connection
  - MIC broadcasting (V/R control)
  - Priority selection (BGM<MIC)
- ❑ Adjustable recording level for log file saving.

# Equipment Setup and Inspection

## 1. TERMINATION Switch (LOAD/OPEN) Setup




 - 1) For a system linked by using RS-485 communication interface, it is necessary to set the termination switch (LOAD/OPEN) on the rear panel to stabilize data transfer.
- 2) Set the termination switch to LOAD only for the first and last-numbered equipment units. All others must be set to OPEN.

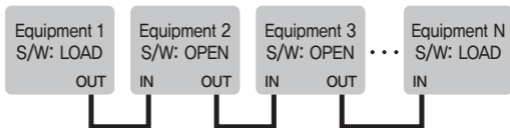

- \* Caution: Communication error may occur if setup is performed incorrectly.
- 3) If there is no equipment connected to LINK IN in DIB-6000, please set the switch to LOAD.

# Front Panel

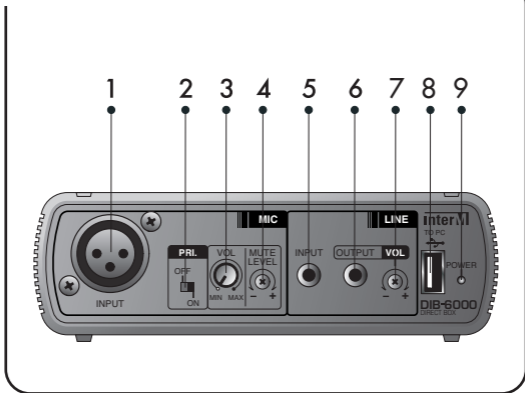 

## 1. MIC INPUT (BALANCED)

General dynamic MIC can be used for broadcasting.

## 2. Priority (PRIORITY) ON/OFF Switch

It is the priority ON/OFF switch for MIC inputs.

If switched ON, MIC signal has a higher priority than signals from PC.

If switched OFF, signals from PC and MIC signals will be mixed.

### **3. MIC Volume**

Controls MIC input levels.

### **4. MUTE Volume**

Controls MUTE levels when MIC priority function is used.

### **5. LINE IN (UNBALANCED)**

Allows the system to broadcast PC sound sources by connecting to the PC's LINE OUTPUT terminal.

### **6. LINE OUT (UNBALANCED)**

Used when saving an EM/RM broadcasting sound source by connecting with the LINE INPUT terminal of a PC.

### **7. LINE output (UNBALANCED) level control volume**

Controls LINE output levels.

### **8. USB Terminal**

 
Connects to USB terminal of a PC.

Power required for communication and operation for system controls will be supplied through this connection.

### **9. Power display LED**


LED will be on if power is supplied.

# Rear Panel

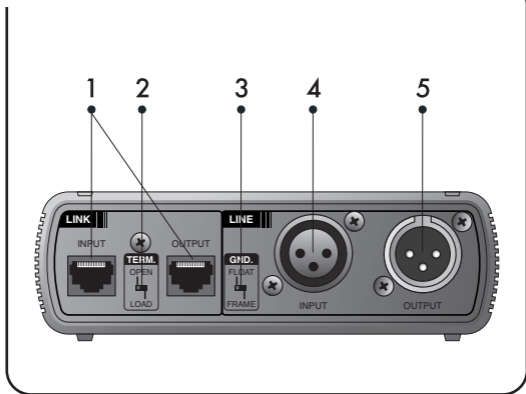

## 1. LINK IN/OUT (RS-485)

 Connects LINK IN terminal to preceding unit, and connects LINK OUT terminal to subsequent unit.



PIN NO.	Function
1	RS-485 Data - A
2	RS-485 Data - B
3	RS-485 Data - Z
4	NA
5	GND
6	RS-485 Data - Y
7	NA
8	NA

※ Same for all IN/OUT terminals.

## **2. TERMINATION Switch (OPEN/LOAD)**

Switch being set for stable data receive/transmit of LINK IN/OUT.

Refer to Equipment Setting and Checking (page 8) for detailed setting methods.

\* Caution : Communication error may occur if setup is performed incorrectly.

## **3. GND Switch (FLOAT/FRAME)**

It is used when connecting or separating LINE INPUT (BALANCED) and ground of LINE OUTPUT(BALANCED).

It reduces HUM noise which may occur when connecting to other equipment and prevents GROUND LOOP.

If switch is set to 'FRAME', grounds of INPUT and OUTPUT will be connected to each other, and if switch is set to 'FLOAT', they will be separated.

 
## **4. LINE IN (BALANCED)**

If signals being inputted from broadcasting system to amp are distributed and inputted to this terminal, signals will be converted to unbalance signals so that PC can be connected. (Refer to page 13, Connecting Methods)


## **5. LINE OUT (BALANCED)**

Unbalance signals coming from PC will be converted to balance signals internally and connected to broadcasting system so that broadcasting can be done in PC.

# Application

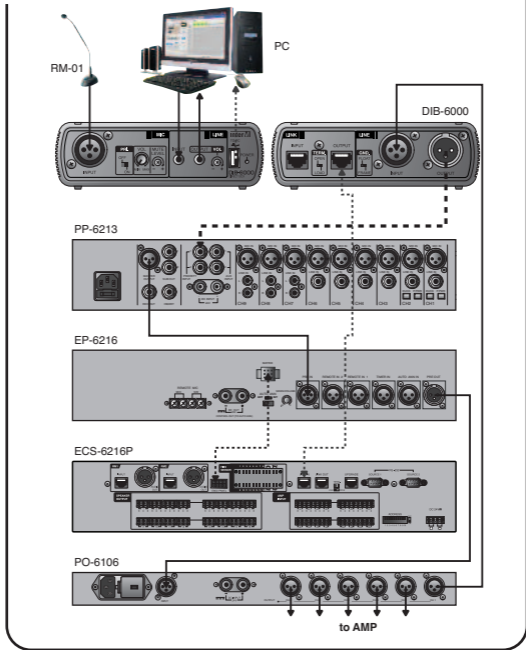

# Block Diagram

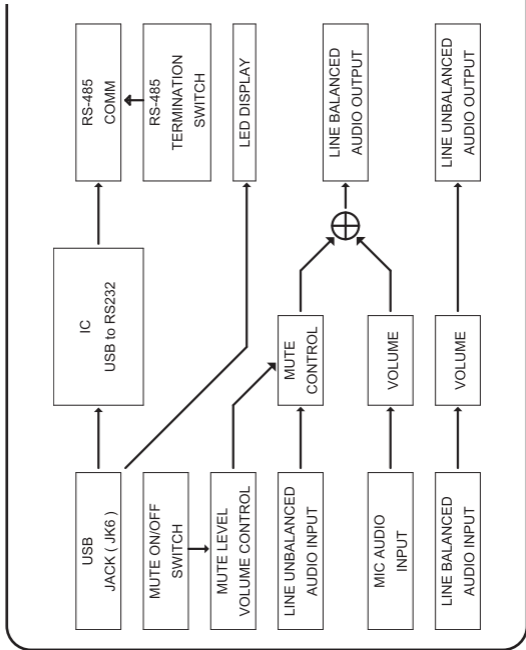 




# Specifications

\* 0dBu = 0.775V, 0dBV = 1V

	<b>DIB-6000</b>
INTERFACE	USB
<b>MIC IN (Balance) to Line OUT (Balance)</b>	
INPUT SENSITIVITY	-60dB
THD+N	Less than 0.5%
FREQUENCY RESPONSE	70Hz ~ 10kHz
S/N	Better than 50dB
<b>LINE IN (Unbalance) to Line OUT (Balance)</b>	
INPUT SENSITIVITY	0dB
THD+N	Less than 0.2%
FREQUENCY RESPONSE	40Hz ~ 12kHz
S/N	Better than 80dB
<b>LINE IN (Balance) to LINE OUT (Unbalance)</b>	
INPUT SENSITIVITY	0dB
THD+N	Less than 0.1%
FREQUENCY RESPONSE	40Hz ~ 20kHz
S/N	Better than 80dB
Communications protocol	RS-485 (Maximum: 1Km / 3,280 feet)
Operation Temperature	-10°C ~ +40°C / 14°F ~ 104°F
Power Source	USB DC 5V
Weight (Set)	0.74kg / 1.7lbs
Dimensions (Set)	140(W) x 43(H) x 140(D)mm
	5.5(W) x 1.7(H) x 5.5(D)in

\* Design and specification are subject to be changed for the improvement of product quality without pre notice.
 
## \*DIMENSIONS

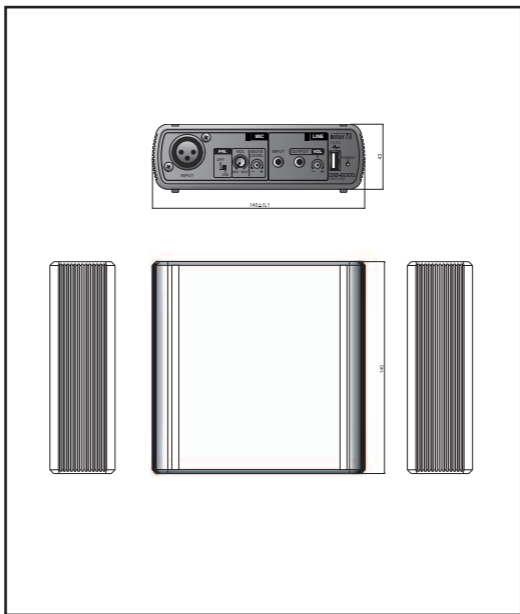

# Service

## Procedures

Ensure the problem is not related to operator error, or external system devices, Once it is certain that the problem is related to the product contact your warranty provider as described in the warranty section of this manual.

## Schematic

A Schematic is available by contacting your warranty provider.

## Parts List

A Parts List is available by contacting your warranty provider.

# Warranty

Warranty terms and conditions vary by country and may not be the same for all products. Terms and conditions of warranty for a given product may be determined first by locating the appropriate country which the product was purchased in, then by locating the product type.

To obtain specific warranty information and available service locations contact Inter-M directly or the authorized Inter-M Distributor for your specific country or region.



Inter-M, Ltd. (Korea) began operations in 1983.

Since then, Inter-M has grown to become one of the largest manufacturers of professional audio and commercial sound electronics equipment in the world.

Inter-M has gained worldwide recognition for its own branded products, as well as private label manufacturing of electronics sold under other names (OEM).

The company is no longer just a Korean company, but rather a global company that is truly international in scope, with factories and offices in Korea and China, and sales and marketing operations located in Japan, Europe, and the U.S.A.

With more than 850 employees around the globe, Inter-M is well-poised for further growth and expansion.

**INTER-M AMERICAS, INC.**

5666 CORPORATE AVE. CYPRESS, CA 90630

TEL : +1-714-828-2200, FAX : +1-714-828-2210

HOME PAGE : [HTTP://WWW.INTER-M.NET](http://www.inter-m.net), E-MAIL : [INFO@INTER-M.NET](mailto:INFO@INTER-M.NET)

**INTER-M Corporation**

SEOUL OFFICE : 719, DOBONG-RO, DOBONG-GU, SEOUL, KOREA

TEL : +82-2-2289-8140-8, FAX : +82-2-2289-8149

HOME PAGE : [HTTP://WWW.INTER-M.COM](http://www.inter-m.com), E-MAIL : [OVERSEAS@INTER-M.COM](mailto:OVERSEAS@INTER-M.COM)

**MADE IN KOREA**  
**[www.inter-m.com](http://www.inter-m.com)**  
2017. 5 127726